

R S L

Refreshment Systems Ltd.

Cleaning Guide Ecoboiler Push Button



Contact us

www.refreshmentsystems.co.uk

For Service:
service@refreshmentsystems.co.uk
01274 750 008

For Ingredients:
ingredients@refreshmentsystems.co.uk
01226 720 482

This cleaning guide is for **advice only**

Please refer to the operative manual for complete safety information and instruction when considering any maintenance on the machine.

MAINTENANCE:

This machine has been designed to give many years of trouble free service. The only regular maintenance required is occasional de-scaling.

Descaling Procedure:

- Isolate machine from power supply.
- Isolate machine from water supply.
- ALLOW TO COOL COMPLETELY!
- Drain water from machine.
- Remove all lids.
- Remove as much scale as possible by hand, paying particular attention to level probes (White plastic with steel tab). Be very careful not to damage any attachments.
- Use ScaleKleen, Marco part No. 8000270 or similar. Follow instructions carefully.
- Thoroughly clean and flush the machine before re-use.
- Follow installation and first time operation instructions.

CLEANING:

The exterior of these machines may be cleaned with a damp cloth and a light detergent. Do not use abrasive cloths or creams, as this will spoil the finish of the machine. Do not use a water jet or spray. **NB:** Beware of accidentally operating the draw off tap or push button when cleaning the front of the machine.

LIMESCALE:

In common with all water boiler manufacturers, service calls resulting from limescale are not covered by warranty. Fitting a scale reducer is recommended, especially in hard water areas. This can reduce the build-up of scale but may not stop it altogether. The frequency that descaling is required depends on the local water supply; hard water areas need more attention. Descaling of the machine should ideally be carried out by qualified service personnel.