




REFRESHMENT SYSTEMS LTD.

## Operating Instructions

This unit can be used independently or as part of Ward beverage trolley. If the unit is being used independently, it can be operated on any clean and dry surface following the instructions below.

This unit is not intended to be operated by means of an external timer or separate remote-control system.

1. Inspect the unit and mains cable for any signs of damage before use.
2. Ensure that the unit is clear of any crumbs or debris from previous use.
3. Clean food contact surfaces using a clean cloth and proprietary food safe cleaning products.

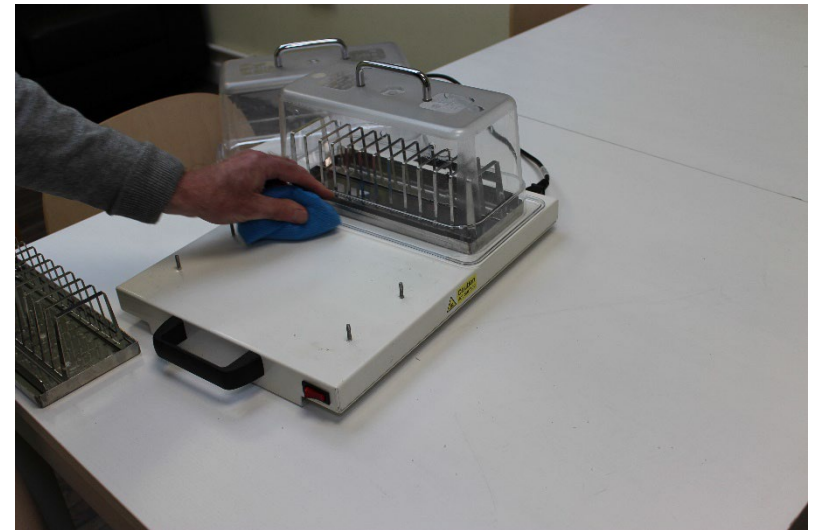

4. Ensure that the Toast Racks and plastic lids are present and correctly located



5. Ensure that the plug and socket are clean and dry and connect to a suitable power supply.
6. Switch on the unit using the **Red** power switch



7. Allow approximately 20 minutes for the warmer to reach the correct operating temperature.
8. The surface of the warmer will be hot, please take precautions.



If the toast warming unit is being used as part of the Ward Beverage trolley, slide the unit forward using the handle.

Follow the instructions above, this time using the internal power supply, located behind the unit.



The unit can then be slid in and out for use on the trolley, ensuring that there are no obstructions in place when moving the unit on the runners.

This unit must only be serviced by a Refreshment Systems representative or an appointed service partner.


If service is required, this unit must be disconnected from the mains power supply.

Original Instructions



## Toast Warming Unit

Model No. RSLTW2020

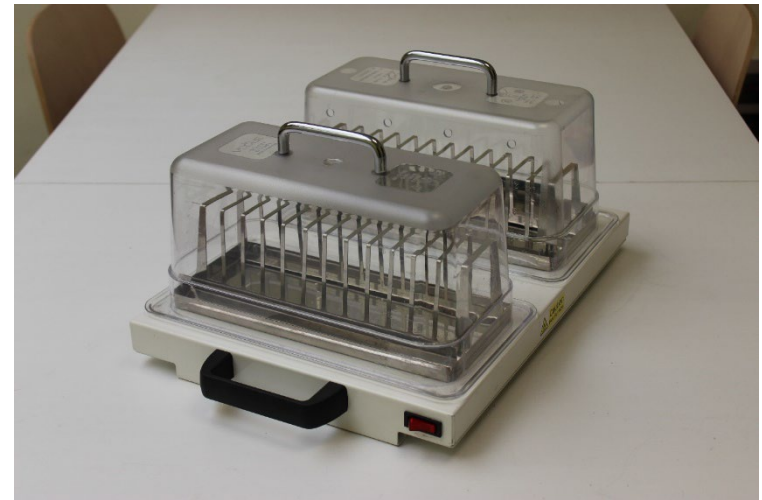

The After Sales Division

Refreshment systems Ltd

31 Bolling Road,  
Bradford,  
West Yorkshire,  
England, BD13 3PG  
Helplines (office hours) UK 01274 750000  
Spare Parts 01274 750008 [www.refreshmentsystems.co.uk](http://www.refreshmentsystems.co.uk)

## Health and Safety Advice

WARNING – THIS TOAST WARMING UNIT MUST ONLY BE USED BY A COMPETENT PERSON

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cable or any part of the device is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance near or below combustible material such as curtains.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system

***This appliance must only be used for the intended purpose.***



WARNING: Do not touch the top of the appliance or other hot parts during or after use, use handles or knobs.

WARNING: Do not wrap the cable around the main body of the appliance during or after use.

WARNING: Do not insert oversize foods, metal, foil packages or utensils into the warmer.

WARNING: Do not attempt to dislodge food when the appliance is plugged.

WARNING: Misuse of the appliance could cause personal injury

Refreshment Systems Ltd has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist.



Check with your Local Authority or retailer for recycling advice in your country

Unit manufacturer:

Beakbane Ltd

Stourport Road

Kidderminster

England

DY11 7QT

Design Engineer: Richard Roberts

## NOTES