


R S L


Refreshment Systems Ltd.

Ward Beverage Trolley
Cleaning Instructions


Filling The Water Tank

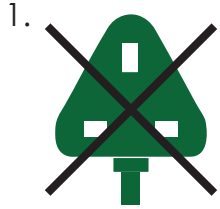


Make sure that the trolley is NOT plugged in

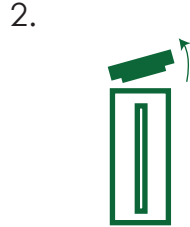


Lift the lid on the boiler compartment and remove the black bung

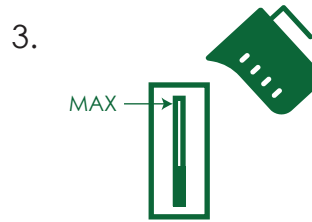


Using a plastic jug, fill the boiler with cold drinking water. Check the water level on the side gauge and ensure that it reaches the maximum level on the indicator

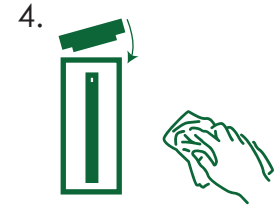

Refit the black bung and wipe away any spillages

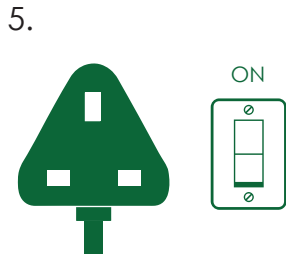


Plug the trolley into the mains and switch on

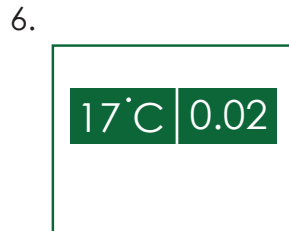

The power on light will illuminate and display the current boiler temperature. Within the display it will also show how long the boiler will take to reach its optimum operating temperature



The water ready light will illuminate when the water has reached the correct temperature, indicating that the trolley is ready for use

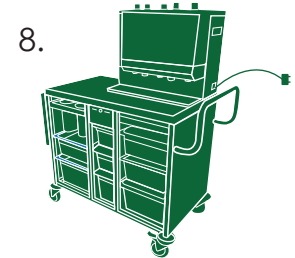


For best results always leave the trolley full of water and plugged in between drink rounds. This will enable drinks to be served at any time, without the user having to wait for the water to heat up

Make sure to unplug the trolley before taking it round the wards.

Making A Drink

Loose Ingredient

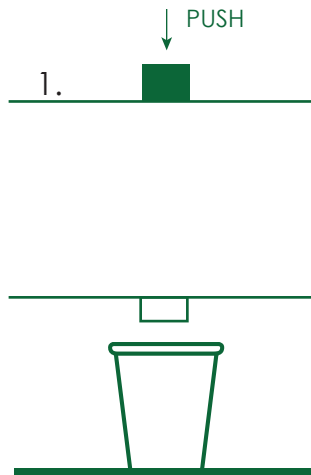

Place a suitable cup below the selected drink dispensing chute. Push the button firmly downwards

Incup

1.



For incup drinks, take a cup from your chosen drink chute (each cup is filled with the required ingredients so there is no need to add additional ingredients to the cup)

2.



Add hot water from the tap and stir

OR

Important: before cleaning any part of the equipment make sure that it is not plugged into the electric mains. Only use the hospital's approved cleaning solutions during the cleaning process.

After Every Use:

1.




Wipe all trolley surfaces and the underside of the worktop. The ingredient housing should also be cleaned thoroughly

2.




Empty the teapot(s) and rinse out

3.

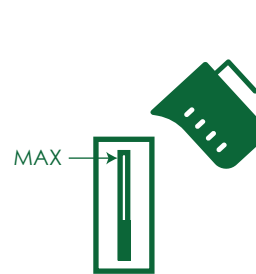

Refill the water to the required level, ready for the next drinks round

4.

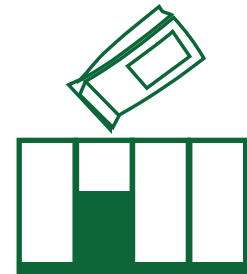

Refill the ingredient canisters. If empty, replace with a new canister and clean the old one


Weekly Maintenance :

1.




Remove the canisters and dispenser mount for cleaning. Clean the inside of the dispenser housing unit with a clean dry cloth. Wash the dispenser mount and canisters in clean warm water. Rinse and dry all parts and fit back into the trolley

2.

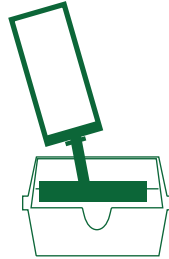


Dispense any remaining ingredients into a new clean canister. Wash all used canisters in clean warm water, rinse and dry thoroughly

3.

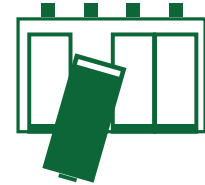

Refit the dispenser mount and clean canisters into the trolley

4.

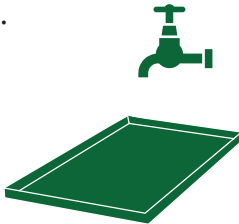

Remove all trays and clean in warm water. Rinse and wipe off any excess moisture

5.



Clean the underside of the trolley and around each of the draw slides (this should be done before replacing the clean trays back into the trolley)

Contact us:

ORDER INGREDIENTS

01226 720 482

GENERAL ENQUIRIES

0800 169 3686

SERVICE DEPARTMENT

01274 750 008