

R S L


REFRESHMENT SYSTEMS LTD.

Trolley cleaning guide


Cleaning Instructions

Your Refreshment Systems Ward Beverage Trolley has been designed to give you a simple and efficient method of providing your patients with a high quality choice of drinks. To get the best out of the system, please read these instructions before you use the trolley and keep them in a safe place for future reference.


Filling The Water Tank

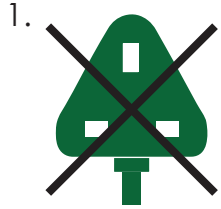


Make sure that the trolley is NOT plugged in.

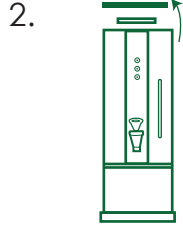


Lift the boiler lid and remove the inner lid

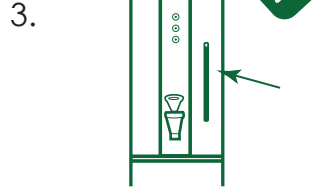


Using a plastic water jug, fill up with cold drinking water, until the water level indicated in the sight tube reaches its maximum.

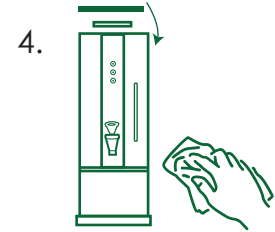

Refit both lids and wipe up any spillage

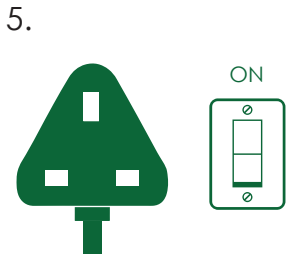


Plug the trolley in to the mains and switch on.

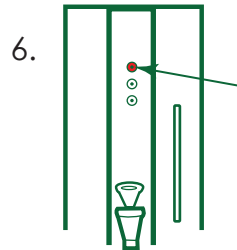

The power on light will come on and the boiler will heat up to operating temperature.



The Water Ready light will show green when the water is at the right temperature and the trolley is ready to use.

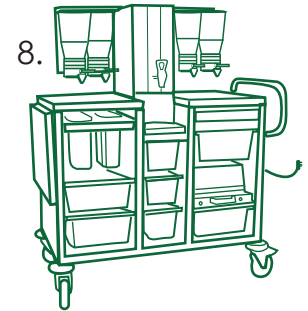


Always leave the trolley full of water and plugged in between drinks rounds.


(This will enable drinks to be served at any time, without waiting for the water to heat up)

Make sure to unplug the trolley before taking it round the wards.

Making A Drink

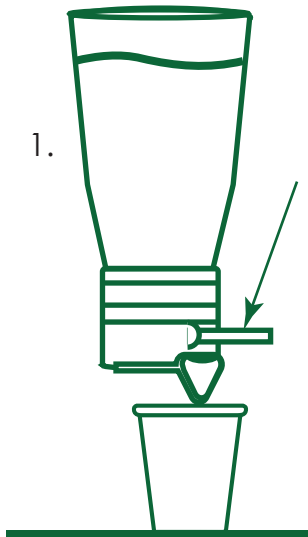

Place a suitable cup under the dispenser chute beneath your selected drink and pull the lever to dispense product.

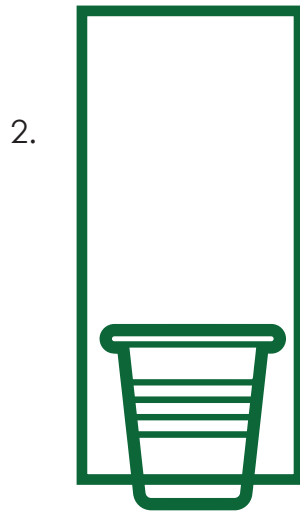

For IN-CUP pull down to dispense a cup filled with your chosen ingredient.



Add hot water from the tap and stir.




If an individual cup is required, use a 1 cup tea bag and make the drink in a suitable cup.

IMPORTANT: Before cleaning any part of the equipment make sure that it is not plugged in to mains electricity. **ONLY USE THE HOSPITAL'S APPROVED CLEANING SOLUTIONS**

After Every Use Do The Following:

1.

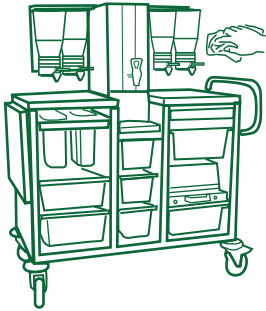


Wipe the trolley surfaces the underside of the worktop and clean the ingredient housing.

2.




Empty the teapot(s) and rinse out.

3.

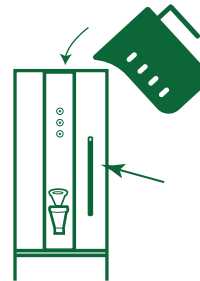

Refill the water to the required level, ready for the next ward round.


4.

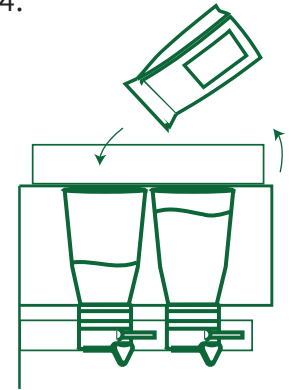

Lift lid and refill ingredient canisters as required, if empty, replace with a new canister and clean the old one.


Every Week Do The Following:

1.

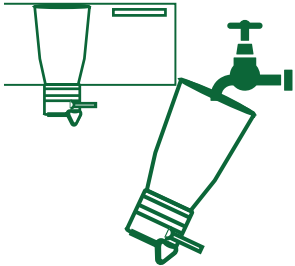


Remove canisters and dispenser mount to clean them, clean the inside of the dispenser housing and wash the dispenser mount in clean warm water, rinse dry and replace in the dispenser housing.

2.

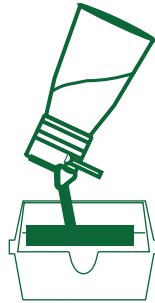

If required empty ingredients into corresponding clean canister and wash used canisters in clean warm water. Rinse, wipe off excess moisture and allow to dry thoroughly.

3.

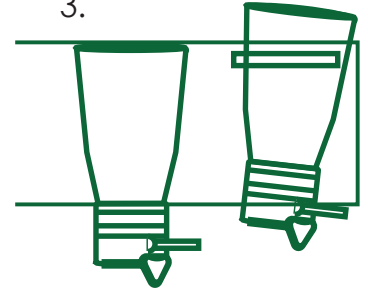

Refit the new canisters into the dispenser housing making sure that they are correctly placed.

4.



Remove all the trays and clean in warm water Rinse and wipe off excess moisture.

5.



Clean underside of the trolley and around draw slides before replacing the clean trays.

Customer Care Team

T: 01274 750 008

E: customercare@refreshmentsystems.co.uk

